

# Приложение IRC 22 F (версия 19.06.29 11:02)

Модели оригинальных пультов и соответствующие им коды пульта IRC приведены в разделе "Коды пульта IRC 22 F".

Функции всех кнопок для каждого кода пульта IRC можно узнать из таблиц данного приложения.

Пульт IRC может иметь дополнительные функции (если указаны в столбце "Доп. функция"). Доступ к ним осуществляется при помощи кнопки SHIFT (см. в инструкции рис.1, п.16). Для доступа к дополнительным функциям нажмите кнопку SHIFT и, удерживая её нажатой, нажмите ту кнопку, дополнительная функция которой Вам необходима.

## После первой установки батареек

Кнопка устройства пульта IRC	Код пульта IRC	Кнопка устройства пульта IRC	Код пульта IRC
TV	101	SHIFT + TV*	302
VCR	102	SHIFT + VCR*	303
AUX	103	SHIFT + AUX*	304
SAT	301	SHIFT + SAT*	305

\* Нажмите кнопку SHIFT и, удерживая её нажатой, нажмите и отпустите одну из кнопок пульта: TV, VCR, AUX или SAT.

## Доступные коды пульта IRC 22 F

Номер базы кодов (диапазон кодов)	Устройство базы кодов	Доступные коды пульта IRC
1 (101-199)	TV	101 - 104
2 (201-299)	VCR	201
3 (301-399)	AUX	301 - 319
4 (401-499)	-	Нет
5 (501-599)	TV	501 - 599
6 (601-699)	TV	601 - 699
7 (701-799)	TV	701 - 799
8 (801-899)	SAT	801 - 899
9 (901-999)	SAT	901 - 999

## Коды пульта IRC 22 F

### Коды к устройствам марки TECHNICS

Модель*	Устр-во	Код	Модель	Устр-во	Код
DVD-01	AUX, CD, DVD	305	EUR7702050	AUX, CD, DVD	301
EUR642210 (CD)	AUX, CD, DVD	303	EUR7702070	AUX, CD, DVD	301
EUR642210 (TUNER)	AUX, CD, DVD	304	EUR7702080	AUX, CD, DVD	315
EUR643806	AUX, CD, DVD	303	EUR7702140	AUX, CD, DVD	302
EUR643900	AUX, CD, DVD	303	EUR7702170	AUX, CD, DVD	301
EUR644346 (AUDIO)	AUX, CD, DVD	310	EUR7702270	AUX, CD, DVD	301
EUR644346 (CD)	AUX, CD, DVD	307	EUR7702300	AUX, CD, DVD	302
EUR644346 (TUNER)	AUX, CD, DVD	304	RAK-CH101WH	AUX, CD, DVD	306
EUR644346 (TV)	TV	104	RAK-CH144WH	AUX, CD, DVD	306
EUR644346 (VCR)	VCR	201	RAK-CH159WH	AUX, CD, DVD	306
EUR644346 (VDP)	AUX, CD, DVD	313	RAK-CH201WH	AUX, CD, DVD	306
EUR644348 (AUDIO)	AUX, CD, DVD	310	RAK-CH202WH	AUX, CD, DVD	306
EUR644348 (CD)	AUX, CD, DVD	307	RAK-CH214WH	AUX, CD, DVD	306
EUR644348 (TUNER)	AUX, CD, DVD	304	RAK-CH219WH	AUX, CD, DVD	306
EUR644348 (TV)	TV	104	RAK-CH220WH	AUX, CD, DVD	306
EUR644348 (VCR)	VCR	201	RAK-CH426WH	AUX, CD, DVD	306
EUR644348 (VDP)	AUX, CD, DVD	313	RAK-CH745WH	AUX, CD, DVD	306
EUR644377 (AUDIO)	AUX, CD, DVD	310	RAK-EHA18WH	AUX, CD, DVD	301
EUR644377 (CD, TAPE)	AUX, CD, DVD	307	RAK-EHA18WH	AUX, CD, DVD	301
EUR644377 (DVD)	AUX, CD, DVD	308	RAK-EHA20WH	AUX, CD, DVD	314
EUR644377 (TUNER)	AUX, CD, DVD	304	RAK-EHA21WH	AUX, CD, DVD	314
EUR644377 (TV)	TV	104	RAK-EHA28WH	AUX, CD, DVD	301
EUR644377 (VCR)	VCR	201	RAK-EHA29WH	AUX, CD, DVD	301
EUR645272	AUX, CD, DVD	316	RAK-EHA32WH	AUX, CD, DVD	314
EUR645403	AUX, CD, DVD	312	RAK-EHA33WH	AUX, CD, DVD	314
EUR646469 (AUDIO)	AUX, CD, DVD	310	RAK-HDA06WH	AUX, CD, DVD	315
EUR646469 (CD)	AUX, CD, DVD	303	RAK-HDA07WH	AUX, CD, DVD	315
EUR646469 (DVD)	AUX, CD, DVD	308	RAK-SC304W	AUX, CD, DVD	317
EUR646469 (TAPE)	AUX, CD, DVD	311	RAK-SC707WH	AUX, CD, DVD	306
EUR646469 (TUNER)	AUX, CD, DVD	304	RAK-SU129WH (CD)	AUX, CD, DVD	318
EUR646469 (TV)	TV	104	RAK-SU129WH (DCC)	AUX, CD, DVD	319
EUR646469 (VCR)	VCR	201	RAK-SU129WH (TUNER)	AUX, CD, DVD	304
EUR646498 (AUDIO)	AUX, CD, DVD	309	RAK-SU181WH (CD)	AUX, CD, DVD	318
EUR646498 (CD, TAPE)	AUX, CD, DVD	307	RAK-SU181WH (DCC)	AUX, CD, DVD	319
EUR646498 (DVD)	AUX, CD, DVD	308	RAK-SU181WH (TUNER)	AUX, CD, DVD	304
EUR646498 (TUNER)	AUX, CD, DVD	304	RAK-SU182WH (CD)	AUX, CD, DVD	318
EUR646498 (TV)	TV	104	RAK-SU182WH (DCC)	AUX, CD, DVD	319
EUR646498 (VCR)	VCR	201	RAK-SU182WH (TUNER)	AUX, CD, DVD	304
EUR7702020 (AUDIO)	AUX, CD, DVD	310	RAK-SU228WH (CD)	AUX, CD, DVD	318
EUR7702020 (CD)	AUX, CD, DVD	303	RAK-SU228WH (TUNER)	AUX, CD, DVD	304
EUR7702020 (DVD)	AUX, CD, DVD	308	RC-2129MS	TV	102
EUR7702020 (TAPE)	AUX, CD, DVD	311	RS09-M312	TV	101
EUR7702020 (TUNER)	AUX, CD, DVD	304	XT-1418	TV	103
EUR7702020 (TV)	TV	104	XT-21A5T	TV	103
EUR7702020 (VCR)	VCR	201			

\* По каталогу «IRC»

**Коды к TV устройствам различных марок**

Марка	Код
AEG	544
AIWA	502, 503, 523, 528, 579, 634, 678, 706, 710, 712, 716
AKAI	501, 503, 512, 516, 520, 522, 524, 525, 537, 538, 540, 545, 546, 547, 550, 571, 572, 582, 583, 584, 585, 596, 598, 608, 613, 626, 652, 673, 691, 704, 708, 711, 722, 731, 769
AKIRA	511, 514, 516, 524, 525, 537, 538, 541, 545, 547, 556, 577, 586, 594, 597, 598, 601, 623, 626, 629, 631, 649, 666, 680, 689, 690, 693, 699, 717, 739, 796, 797, 798, 799
AMCOL	501, 525, 545, 747
ANITECH	501, 525, 616, 726
ATLANTA	501, 751
AVEST	537, 538, 539, 766
BANG & OLUFSEN	728, 737
BBK	522, 551, 594, 597, 684, 701, 788, 792, 793
BEKO	525, 530, 535, 559, 723, 742
BIGSTON	501, 503
BLAUPUNKT	512
BORK	525, 547, 646, 766
BRAND	711
BROKSONIC	501
CAMERON	538, 550, 567, 675, 697, 702, 792, 794
CASIO	529, 705, 706
CASKA	761
CHANGHONG	516, 596, 642
CLATRONIC	501, 545, 559, 571, 742
CONTEC	501, 603, 604, 613
CORTLAND	644
CROWN	501, 503, 511, 524, 525, 530, 571
DAEWOO	501, 508, 518, 520, 525, 526, 536, 538, 539, 546, 565, 571, 576, 598, 613, 685, 687, 692
DARTLAND	501
DAYTRON	501
DEXP	516, 579, 684, 702
DIGITAL	547
DISTAR	562, 616
DNS	596, 702, 708
DOFFLER	684, 708
DUAL	746
ELEKTA	501, 503, 520, 525, 527, 615
ELEKTRONIKA	583
ELENBERG	538, 545, 550, 565, 567, 579, 581, 644, 655, 676, 683, 717, 785
EPLUTUS	537, 644, 677, 682, 697, 724
ERC	537, 631, 764
ERISSON	511, 514, 516, 525, 526, 537, 538, 541, 550, 556, 561, 568, 586, 596, 599, 623, 626, 629, 631, 711, 712, 714, 739, 747, 779, 786, 795
EVGO	538, 540, 630
FINLUX	501, 511, 583, 589, 608, 732, 758, 774
FUJITSU	544, 573
FUNAI	501, 502, 503, 504, 505, 525, 537, 538, 581, 603, 764
FUSION	596, 642, 699, 705, 706, 781
GBS	501, 520, 525, 571, 583
GENERAL	537, 556
GOLD STAR - LG	501, 512, 518, 525, 527, 559, 570, 583, 584, 589, 609, 613, 642, 706, 712, 742, 750, 765
GRUNDIG	501, 512, 525, 606, 662, 718, 719, 733
HAIER	518, 526, 561, 574, 657, 667, 669, 707, 778
HAPPY	501
HARPER	706, 712
HCM	501, 503, 525
HELIX	701, 702, 708
HIL	503
HITACHI	501, 515, 518, 522, 525, 537, 544, 548, 554, 578, 584, 587, 588, 604, 613, 640, 729, 749, 775, 783
HORIZONT	525, 540, 545, 550, 559, 583, 664, 672, 771
HPC	546
HYUNDAI	516, 518, 522, 525, 526, 537, 538, 540, 541, 546, 547, 550, 556, 580, 596, 597, 599, 626, 642, 648, 650, 655, 705, 711, 714, 717, 760
INNO-HIT	501, 525, 571
IRBIS	596, 714
IVA (ИВА)	537, 561, 637
IZUMI	516, 537, 596, 663, 691, 695, 703, 705, 711, 792
JINLIPI	537, 637, 766
JVC	513, 515, 593, 604, 727
KAMACROWN	571
KANSAI	501, 525
KENSTAR	516
KITT	503, 613, 616, 726
KNEISSEL	753
KONKA	537, 538, 560, 561, 581, 616, 626, 717
KRONMARK	596
LOEWE	542, 709, 744
MEDION	525
METZ	745
MITSUBISHI	501, 520, 522, 525, 604, 611, 722, 728, 744
MIYOTA	537, 644, 656
MTC	501, 583
MULTITECH	501, 525
MYSTERY	516, 537, 597, 642, 650, 653, 701, 702, 708, 773, 780, 789
NASH	537
NEC	501, 517, 520, 526, 552, 604, 625, 722
NESCO	501, 525
NESONS	708
NOKIA	519, 584, 610, 614, 616, 740, 746, 767
NOVA	501, 616, 638
NOVEX	516, 546, 599
NTT	759
OMEGA	501, 571
ONIDA	513
ONIKS	516, 525, 537, 545, 546, 547, 680
ONWA	524, 525
OPERA	644, 666, 682
ORBITA	635
ORION	501, 503, 506, 507, 509, 516, 525, 528, 537, 591, 603, 617, 619, 627, 641, 643, 664, 715, 720, 722, 729, 746
ORSON	526, 537
PANASONIC	512, 531, 532, 752

**Коды к TV устройствам различных марок**

Марка	Код
PHANTOM	644
PHILIPS	501, 511, 524, 525, 540, 549, 628, 639, 707, 748
PHOENIX	613
PHOENIX GOLD	708
PIONEER	548, 555, 566, 575, 647, 666
PIXELVIEW	525
PLANTRON	735
POLAR	525, 526, 537, 538, 540, 543, 546, 547, 581, 596, 599, 663, 664, 683, 703, 711, 717
POLAROID	525
PREMIERA	773
PRESTIGIO	564, 656
PRIMA	522, 547
PROLOGY	653, 655, 777, 784
RADUGA	525, 545, 569, 583, 743
RAINFORD	525, 537, 544, 545
RECOR	511, 525
REKORD	520, 525, 526, 537, 538, 539, 545, 547, 725, 736, 743, 747
RFT	535, 618, 728
ROADSTAR	501, 508, 525, 571
ROLSEN	503, 516, 525, 537, 538, 540, 543, 546, 564, 576, 592, 594, 596, 649, 656, 669, 684, 714, 768, 770
ROVERSCAN	662, 770
ROYAL	501, 503, 525, 616
RUBIN	504, 516, 525, 537, 546, 583, 619, 665, 714, 776
SABA	509, 510, 521, 602, 756
SALORA	584
SAMSUNG	501, 525, 526, 529, 563, 580, 595, 596, 608, 612, 613, 622, 641, 645, 688, 723, 741
SANSUI	524, 525, 538, 556, 695
SANYO	501, 519, 522, 525, 530, 540, 544, 550, 558, 604, 608, 610, 618, 621, 696, 722, 730, 734, 738
SATURN	702, 708
SCARLETT	541, 545
SCHNEIDER	525, 540, 571, 771
SELECO	736, 763
SETRO	520
SHARP	526, 544, 548, 604, 707, 721
SHERION	616
SHIVAKI	501, 503, 508, 516, 518, 520, 525, 526, 527, 536, 538, 539, 540, 545, 546, 547, 550, 556, 580, 583, 585, 596, 599, 609, 619, 630, 632, 635, 636, 643, 644, 664, 681, 694, 708, 743, 791
SIEMENS	512, 525, 660, 726, 734
SIESTA	501, 537, 637
SILELIS	613
SILVER	633
SITRONICS	503, 516, 525, 537, 538, 540, 543, 545, 594, 626, 629, 661, 671, 672, 674, 679, 680, 686, 766
SOKOL	516, 525, 547, 635
SONY	533, 604, 659, 722
SPEKTR	525, 538, 668
START	525, 537, 545, 546, 547
STASSFURT	535, 618
STINOL	525
SUPER	537, 561, 644, 653, 654, 655, 666, 677, 682, 724, 754, 772, 780
SUPER GENERAL	537
SUPRA	501, 508, 516, 518, 520, 522, 525, 527, 529, 536, 537, 541, 563, 579, 580, 596, 597, 612, 642, 643, 687, 690, 705, 706, 712, 713, 790
SUZUKI	516, 556
SVEN	574
TCL	521, 538, 540, 642
TEAC	525
TECHNICS	537, 538
TECHNO	501, 525, 538, 544, 546, 556, 568, 579, 596, 599, 644, 664, 703, 791
TECKTON	522, 582, 601, 669, 670
TELEFUNKEN	510, 521, 561, 590, 602, 605, 642, 708, 712, 714, 756, 757
TELEVISION	501, 525, 616
THOMSON	509, 510, 521, 550, 579, 602, 624, 642, 702, 756
TOSHIBA	516, 544, 553, 604, 651, 744
TRONY	516, 525, 537, 538, 550, 574, 657
TVT	511, 525, 530, 535, 538, 583, 586, 620, 630, 723, 742
UNITED	525
VARTA	642
VESTEL	525, 544, 556, 583, 619
VIEWSONIC	557, 698
VITA	547
VITEK	537, 650
VITYAS	525, 708
VOLNA (ВОЛНА)	635
VR	516, 537, 565, 598, 702, 714, 786
WALTHAM	503, 509, 511, 583, 584, 607, 613, 729, 762
XORO	522, 526, 545, 781, 782, 787
XPX	663
НЕИЗВЕСТНАЯ МАРКА	525, 546, 574, 596, 648, 656, 666, 711, 755

**Коды к SAT устройствам различных марок**

Марка	Код
AIRTONE	968
ALFA GOLD	828
AMINO (СТРИМ)	829, 902
ARION	835
ARRIS	883
ASTON	811
BBK	931
BIG STAR	965
BIGSAT	839, 840, 903, 936
CADENA	958, 962
CONTINENT	886, 975
COSHIP	855
DAEWOO	872
D-COLOR	946, 961
DELTA SYSTEMS	985
DIGIFORS	946
DIVISAT	957, 958
D-LINK	923
DNS	950, 968
DR.HD	983
DRE	804, 888
DREAM	819
DUNE	927, 934
ECHOSPACE	862
EHOSTAR	808, 809, 822
ELTEX	987
EPLUTUS	961
EUROSKY	840, 981
EUROSTAR	863
EUSTON	825
EVO	965
GALAXY INNOVATIONS	878, 881, 908, 911, 912, 917, 924
GENERAL SATELLITE	804, 868, 888, 907, 933, 954
GLOBALTEQ	833
GLOBO	909, 915, 925, 935, 945, 956, 971, 973, 995, 999
GOLD STAR - LG	871
GOLDEN INTERSTAR	821, 841, 879, 918
GOLDEN MEDIA	847, 912
GOLDMASTER	911
HD BOX	847, 911
HITACHI	824, 832
HIVION	929
HOME	968
HOMECAST (ВОЛЯ)	820, 831, 836
HUMAX	803, 804, 823, 848, 860, 861, 905, 949
HYUNDAI	968
ID DIGITAL	804
INTEK	984
INTERCROSS	988
KAON	820, 949
KARTINA TV	934
KOSMOS	855, 856
LANS	970
LOCUS	946
LUMAX	852, 873, 907, 913, 965, 994
MAG	988
MEDIA COM	825
MOTOROLA	883, 884, 901, 974
MYSTERY	910, 997
NDS	814
NEXT	864
NOKIA	813
NOT	941
ONLIME	905
OPENBOX	827, 835, 869, 870, 911, 990, 991
OPENTECH	972
OPENTEL	865
OPTICUM	971
ORBITA	946, 995
ORIEL	887, 926, 941, 948, 955, 986
PACE	801, 932, 953
PATIX DIGITAL	946, 967, 992
PAUXIS	842, 859
PERFEO	960, 981
PHILIPS	857, 899
PIONEER	851
POLAR	858
REFLECT	959
REXANT	977
RIKOR	916, 947
ROLSEN	930, 941, 942, 961
SAGEMCOM	906
SAMSUNG	803, 810, 812, 854
SEG	818
SELENGA	946
SEZAM	882
SKY VISION	952, 966, 977, 982
SKYMASTER	830
SKYWAY	911
SKYWORTH	989
STAR	833
STAR TRACK	826, 835, 943
STARNET	885
STRONG	805, 806, 815, 816, 817, 828, 830, 914
SUNNIWELL	875
SUPERBOX	903
SUPERMAX	821, 866, 880, 924
SUPRA	950, 960, 962

**Коды к SAT устройствам различных марок**

Марка	Код
TECHNOSAT	852, 853
TEL-ANT	960
TELEFUNKEN	961, 968
TESLER	926
TOP BOX	965
TOPFIELD	837, 838, 877, 891
TOSHIBA	876
TV STAR	967
TVJET	946, 976
VESTEL	820, 824
VU+	919, 920, 921, 922
WORLD VISION	821, 928, 951, 952, 961, 968
XSAT	801, 807
XSAT (НТВ+)	801, 802, 807, 906, 972, 984, 998
YUXING	904
ZUXEL	874
БИЛАЙН	883, 884, 901, 923
ВОЛГАТЕЛЕКОМ	842, 843, 844, 845, 846, 847, 849, 850, 858, 867
ДОМ.RU	820, 905
ДОМОЛИНК	874, 904
МТС	829, 855, 902, 964, 974, 979, 980, 989, 993
НЕИЗВЕСТНАЯ МАРКА	834, 835, 842, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 903, 904, 937, 938, 939, 940, 944, 945, 969, 971, 978, 996
РОСТЕЛЕКОМ	874, 904, 923, 963, 988, 993
СИГНАЛ	867, 968
ТЕЛЕКАРТА	867, 909, 973
ТЕЛЕЦИФРА	968

Функции кнопок пульта IRC 22 F к TV устройствам

Кнопки пульта IRC 22 F	Код 101		Код 102		Код 103		Код 104	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲; DVD							PIP ACTION	⊕ +
AUDIO; NICAM			SOUND; PIC		AUDIO		A; S	AUDIO SWAP
VIDEO; SYS			SYS.; BOOKMARK		SYS.; C-SYS; Сист-а		V; P	SYSTEM
☐; ZOOM	ZOOM				ZOOM		ASPECT	SELF ASPECT
▼; TV							TV	⊖ -
☐; ↗							PIP	☐; LIST STORE
☐; LOCK	P.P		ANA; PIC.; NORMAL		PP; →←; P.MODE		STILL	☐; RESET
▲; FAV							FAVORITE	F.P.
⊖	⊖		⊖; STANDBY		POWER; ⊖		⊖; POWER	100Hz/PROGRE
AV	AV		TV/AV; ☐→		TV/AV; TB/AB		TV/AV	AV SELECT
⌘	⌘		⌘; MUTE		MUTE; ⌘		⌘	V.H.BASS
MENU	MENU		MENU; M		MENU; PRESET		MENU; MAIN MENU	MODE
EXIT							PNR	P.AI
▲	P ▲		↑		CH +; P +; CH ▲; ▲		UP; ▲	+
◀	◀		←		V -; VOL -; ◀		LEFT; ◀	☐-
OK	MENU				MENU; PRESET		N	R-TUNE
▶	▶		→		V +; VOL +; ▶		RIGHT; ▶	☐+
▼	P ▼		↓		CH -; P -; CH ▼; ▼		DOWN; ▼	-
⌘; SETUP			PIC; PICTURE		PICTURE; PIC		PICTURE MENU	MOOD LIGHT
♪; TITLE			SOUND MODE		AUDIO; SOUND		SOUND MENU	☐; SURROUND
☐	CALENDAR; CALE		WOOFER; CALEND.		GAME		☐; TXT	CH SEARCH
GUIDE	GAME				WOOF		TV/TEXT	CH SEARCH
⊖	SLEEP		SLEEP; ⊖; INTRO		SLEEP; ZOOM		⊖	WAKE UP
☐			CALL		CLOCK; OPTION; ⊖		☐; LIST/F.TEXT	☐
RED; ●			S.EFFECT				RED	⊕ -
GREEN; ▨			BBE				GREEN	⊕ +
YELLOW; ◀							YELLOW	⊖ -
BLUE; ▨							BLUE	⊖ +
☐	☐		☐; DISPLAY		OSD; DISPLAY; CALL		☐	MULTI WINDOW
☐	☐		RECALL; DISPLAY		REP; RECALL; ALT.		P/C	CHANGE
VOL -	◀		VOLUME -; ◀		V -; VOL -; ◀		◀; -	⊖ -
VOL +	▶		VOLUME +; ▶		V +; VOL +; ▶		▶; +	⊖ +
CH V; ◀	P ▼		PROGRAM -; ▼		CH -; P -; CH ▼; ▼		P -; V	▼
CH ▲; ▶	P ▲		PROGRAM +; ▲		CH +; P +; CH ▲; ▲		P +; ▲	▲
+-; SAT	-/+		+		-/-; +/+-		-/-	I-I; √
CLEAR; X			SKIP				☐; CANCEL	GAME
◀; ●							☐; TIME TEXT	I
▶; i							☐; INDEX	9; +
▶; ?							☐; REVEAL	↶
■; X							☐; HOLD	9; -
; ⊖							☐; F/T/B	STROBE
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 22 F к VCR устройствам

Кнопки пульта IRC 22 F	Код 201	
	Функция	Доп. функция
▲; DVD	CH ▲	▲
AUDIO; NICAM	AUDIO OUT; SOUND	SAP/Hi-Fi
VIDEO; SYS	VIDEO/TV; VCR/TV	VCR; VTR
☐; ZOOM	G-CODE	AUTO TRACKING
▼; TV	CH ▼	▼
☐; ↗	SEARCH	M; ZERO STOP
☐; LOCK	COUNTER RESET	MEMORY
▲; FAV	TIMER REC; EJECT	CLOCK/COUNTER
⊖	POWER; VCR ⊖	
AV	INPUT; INPUT SEL.	
⌘	-	
MENU	MENU	MARK
EXIT	EXIT	SKIP
▲	▲	ON +
◀	◀	OFF -
OK	ENTER; OK	DISPLAY / ENTER
▶	▶	OFF +
▼	▼	ON -
⌘; SETUP	PAL/MESECAM	PICTURE MODE
♪; TITLE	REPEAT	REPEAT
☐	CLOCK COUNT	MONITOR
GUIDE	PROG./CHECK	P
⊖	SLEEP	TIME SEARCH
☐	TAPE SELECT	NAVI
RED; ●	● DIRECT REC	● REC
GREEN; ▨	▨; STILL ADV	SPEED; SP/LP
YELLOW; ◀	REV	REV PLAY
BLUE; ▨	FWD	SLOW; ▨
☐	DISPLAY	INDEX
☐	OSD	◀◀ JET REW
VOL -	TRACK/V-LOCK -	SLOW -; SEARCH -
VOL +	TRACK/V-LOCK +	SLOW +; SEARCH +
CH V; ◀	V; CH V	INDEX ◀
CH ▲; ▶	▲; CH ▲	INDEX ▶
+-; SAT	-/+	100
CLEAR; X	ADD/HLT	CANCEL
◀; ●	◀◀ (REW)	<<
▶; i	▶ (PLAY)	3x ▶
▶; ?	▶▶ (F.FWD)	>>
■; X	■ (STOP)	DATE -
; ⊖	(PAUSE); ▨	DATE +
1, 2, ... 9, 0	1, 2, ... 9, 0	

Функции кнопок пульта IRC 22 F к AUX устройствам

Кнопки пульта IRC 22 F	Код 301		Код 302		Код 303		Код 304		Код 305	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	DISC		DVD		CD		DVD		VIEW	
AUDIO ; NICAM	SIMUL. STEREO		AUDIO		PHONO		AUDIO OFF		AUDIO	
VIDEO ; SYS	AUX		DISC		TAPE1		VCR		N/P	
☐ ; ZOOM	AV EFF. ; CEN. FOC.		ANGLE		TAPE2		STEREO		ZOOM	
▼ ; TV	TUNER/BAND		TUNER/AUX (BAND)	TV/VIDEO	DECK 1/2 (DECK)		TV		L/R	
☐ ; ↗	TAPE/DECK 1/2		TAPE/DECK 1/2				DIMMER		ANGLE	
☐ ; LOCK			POSITON MEMORY	KARAOKE EFFECT			SURROUND		▲	
▲ ; FAV			▲		▲ ; OPEN/CLOSE		TUNER		○ ; POWER	
○	○		○	TV ○	○ ; POWER		○ RECEIVER	TV/AV		
AV	VCR/AUX/6CH INP.		VCR(EXT)/VDP(AUX)	AV EFFECT	AUX		AUX		MUTE	
✳	MUTING		MUTING		MUTING		MUTING		MENU	
MENU	TEST		MENU	SUPER SOUND EQ	DISC		DISC/BAND		RETURN	
EXIT	CH SELECT		CH SELECT	S.3D AI EQ	DISC SKIP		PHONO		▲	
▲	▲		▲		TUNER PRESET ▲		TAPE ; TAPE 1		▲	
◀	◀		◀				-L		◀	
OK	EQ ; EQ/AI EQ/M.EQ		ENTER		DISC ENTER		INPUT MODE		ENTER	
▶	▶		▶		+R		+R		▶	
▼	▼		▼		TUNER PRESET ▼		TAPE 2		▼	
✳ ; SETUP	FLAT		SETUP	PLAY MODE			TEST/SETUP		SETUP	
♪ ; TITLE	☐ PRO LOGIC		TOP MENU	FM MODE			STEREO/2CH MIX		TITLE	
☐	AI EQ		KARAOKE	MIX 2CH	PROGRAM MODE		CD		PBC	
GUIDE	PROGRAM		PROGRAM	PAGE	RANDOM MODE		DCC		PROG	
⏻	SLEEP		SLEEP	GROUP	TIME MODE		SLEEP		TIME	
☐	M.EQ 1/2/3		SUBTITLE	MARKER			NEO:6		SUBTITLE	
RED ; ●	SUPER SURROUND		REPEAT	SUPER SRND	A-B REPEAT		SFC		REPEAT	
GREEN ; ►	SUPER 3D AI EQ		A-B REPEAT	EQ	REPEAT		DOLBY PRO LOG. II		STEP	
YELLOW ; ◀	SUPER SOUND EQ		TEST	CINEMA	LEVEL -	◀ (DECK)	SUBWOOFER		A-B	
BLUE ; ►	DIGITAL S.WOOFER		LIGHT	D.ENH	LEVEL +		TOPE/BALANCE		SLOW	
☐	CD ; DISPLAY		GUI DISPLAY		10		EFFECT ; DELAY		OSD	
☐			RETURN	RANDOM	RECALL		DIRECT TUNING		RETURN	
VOL -	VOLUME -		VOLUME -		VOLUME -		VOLUME -		VOL -	
VOL +	VOLUME +		VOLUME +		VOLUME +		VOLUME +		VOL +	
CH V ; ◀	◀		◀ ; SKIP ▼	TV CH V	◀ ; SKIP (CD)		CH ▼ ; TUNER PR. V		◀ ; PREV	
CH A ; ►	►		► ; SKIP ▲	TV CH A	► ; SKIP (CD)		CH ▲ ; TUNER PR. A		► ; NEXT	
± ; SAT	≥10 / -		≥10	PL	≥10		≥10		10+	
CLEAR ; X	CANCEL		CANCEL	SUBWOOF. LEVEL	CLEAR		LEVEL			
◀ ; ○	◀		◀ ; SLOW/SEARCH		◀ ; SLOW/SEARCH	◀ (DECK)			◀ ; REV	
▶ ; i	▶		▶ ; DVD/CD		▶ ; (CD)	▶ (DECK)			▶ ; PLAY/PAUSE	
▶ ; ?	▶		▶ ; SLOW/SEARCH		▶ ; SLOW/SEARCH	▶ (DECK)			▶ ; FWD	
■ ; X	■		■ ; STOP		■ (CD)	■ (DECK)			■ ; STOP	
■ ; ⏻	◀ / ■		■ ; PAUSE ; ◀ / ■		■ (CD)	■ (DECK)			■ ; PLAY/PAUSE	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 10/0	

Функции кнопок пульта IRC 22 F к AUX устройствам

Кнопки пульта IRC 22 F	Код 306		Код 307		Код 308		Код 309		Код 310	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	CD	TAPE	DVD		PLAY SPEED	QUICK REPLAY	DVD		DVD	
AUDIO ; NICAM	AUTO/MONO ; FM M.		STEREO		AUDIO		STEREO		SOUND MODE	
VIDEO ; SYS	PTY SELECT		TAPE		PLAY MODE	EXT LINK	VCR (HOME)		VCR	
☐ ; ZOOM	☐ PRO LOGIC	PRO LOGIC			ZOOM		TAPE		TAPE	
▼ ; TV	TUNER/BAND	DECK 1/2 (TAPE)			DRIVE SELECT	● ; DIRECT TV REC	TV (HOME THEAT.)		TV ; TV/DVD	
☐ ; ↗	SEARCH		CD		SHOW VIEW	ONE TOUCH MEM.	CD		CD	
☐ ; LOCK	PHONO		SURROUND		ANGLE ; PAGE	POSITION MEMORY	SURROUND		TEST	
▲ ; FAV	OPEN/CLOSE (CD)	OPEN/CLOSE(TAPE)	DECK 1/2 (TAPE)		▲ ; OPEN/CLOSE		DISC/DECK 1/2		DISC/DECK 1/2	
○	POWER		○		○ ; POWER		○		AUDIO ○	
AV	EXT (VCR);VCR/VDP		TV/VIDEO		INPUT SELECT	AV LINK	TV/VIDEO		VDP	TV/AV
✳	MUTING 20dB		MUTING				MUTING		MUTING	
MENU	TEST		MENU		MENU ; PLAY LIST	FUNCTIONS	MENU		MENU	
EXIT	EXT				EXIT	MANUAL SKIP			SFC	
▲	CENTER +	EFFECT ▲	▲		▲		▲		▲	
◀	SURROUND -	BALANCE L	◀		◀ ; ■		◀		◀	
OK	EQ ; EQ SPACE		SELECT		ENTER ; SEL.	FL SELECT	SELECT		SELECT	
▶	SURROUND +	BALANCE R	▶		▶ ; ■		▶		▶	
▼	CENTER -	EFFECT ▼	▼		▼		▼		▼	
✳ ; SETUP	DISC		DISC ENTER		SETUP	ADV. DISC REVIEW	DISC ENTER		TAPE MONITOR	
♪ ; TITLE	FLAT ; EQ SPACE	V.BASS	TITLE		TOP MENU ; TITLE	SOUND ENHANC.	TITLE		TITLE	SUBWOOFER
☐	ON/FLAT		DISC		PROGRAM	PROG/CHECK	TUNER/BAND		PROCESSOR PWR.	
GUIDE	PROGRAM (CD)		SFC		OFF/ON SUBTITLE	GROUP	SFC		TUNER/BAND	
⏻	SLEEP	DELAY TIME	DELAY		SLEEP	TIME/SLEEP/◀JET R.			SLEEP	
☐	EQ	SFP	TEST		SUBTITLE	MARKER	TEST		LEVEL	
RED ; ●	CD/TAPE	TUNER (EASY)			REPEAT MODE	● ; REC	DELAY		OFF/ON	
GREEN ; ►	VCR ; VCR SEL.	TAPE (EASY PLAY)	LEVEL		A-B REPEAT	REC MODE	LEVEL		☐ PRO LOGIC	
YELLOW ; ◀	VDP ; VDP SEL.	◀ (TAPE)	-	◀ (TAPE)	SLOW ◀	F REC	-		-	
BLUE ; ►	DAT/DCC SEL.	CD (EASY PLAY)	+		SLOW ►	AV ENHANCER	+		+	
☐	DISPLAY MODE		DISPLAY		DISPLAY ; ON SCR.	Q. OSD ; STATUS	DISPLAY		DISPLAY	
☐	REPEAT (CD)				RETURN	RANDOM			CH SELECT	
VOL -	VOLUME -		VOL -		◀ ; SKIP/INDEX		VOL -		VOLUME -	TV VOL -
VOL +	VOLUME +		VOL +		▶ ; SKIP/INDEX		VOL +		VOLUME +	TV VOL +
CH V ; ◀	◀ ; ◀ (CD)	TUNER PRESET ▼	CH ▼		CH ▼ ; TR./V-L.	◀ ; SKIP/INDEX	CH ▼		CH LEVEL -	
CH A ; ►	► ; ► (CD)	TUNER PRESET ▲	CH ▲		CH ▲ ; TR./V-L. +	▶ ; SKIP/INDEX	CH ▲		CH LEVEL +	
± ; SAT	≥10		≥10		≥10		≥10		DELAY	
CLEAR ; X	CANCEL (CD)				CANCEL ; CLEAR ; *	DELETE			SFC	
◀ ; ●	◀ ; ◀ (CD)	◀ (TAPE)	◀ ; ◀ (CD)	◀ (TAPE)	◀ ; SLOW/S.	REW A ; A.SRD ; V.S.S.	◀ ; ◀ (CD)		SURROUND -	
▶ ; i	▶ (CD)	▶ (TAPE)	▶ (CD)	▶ (TAPE)	▶ ; PLAY	B ; BASS	▶ (CD)		CENTER +	
▶ ; ?	▶ ; ▶ (CD)	▶ (TAPE)	▶ ; ▶ (CD)	▶ (TAPE)	▶ ; SLOW/S. ; FF	C ; CINEMA	▶ ; ▶ (CD)		SURROUND +	
■ ; X	■ (CD)	■ (TAPE)	■ (CD)	■ (TAPE)	■ ; STOP	C ; CREATE CHAPT.	■ (CD)		CENTER -	
■ ; ⏻	■ (CD)	REC PAUSE (TAPE)			■ ; PAUSE	D ; D.ENH			TEST	
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0			

Функции кнопок пульта IRC 22 F к AUX устройствам

Кнопки пульта IRC 22 F	Код 311		Код 312		Код 313		Код 314		Код 315	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD	TAPE		DELAY +				DVD		DVD/CD	
AUDIO ; NICAM			STEREO				AUDIO		AUDIO	
VIDEO ; SYS						VDP	TAPE/DECK1/2		TAPE	
☐ ; ZOOM							☐ PRO LOGIC		RANDOM	
▼ ; TV	DECK 1/2		DELAY -				TUNER/BAND		CD	
☐ ; ↗			DELAY				DISC		AUTO/MONO	
☐ ; LOCK							ANGLE		ANGLE	
▲ ; FAV							SHIFT		TUNER	
○	POWER		POWER		POWER		○		○	
AV			LINE		ANT-TV/VCR		VCR(EXT)/VDP(AUX)	AV EFFECT	EXT	
✳ ; MUTE	MUTING		MUTING				MUTING		MUTING	
MENU			TEST				MENU	TEST	MENU	
EXIT							RETURN		RETURN	
▲			DELAY +				▲		▲	
◀			BALANCE L				◀		◀	
OK			DELAY				SELECT		ENTER	
▶			BALANCE R				▶		▶	
▼			DELAY -				▼		▼	
✳ ; SETUP			DIMMER				SETUP		SETUP	
♪ ; TITLE			SURROUND				TITLE ; TOP MENU		TOP MENU	
☐			DTS				CH SELECT		PROGRAM	
GUIDE			DR COMP				MARKER		CLOCK/TIMER	
☐							SLEEP		SLEEP	⊙ PLAY
☐			LEVEL				SUBTITLE		SUBTITLE	
RED ; ●			BALANCE L				SUPER SRND	MIX 2CH	REPEAT	⊙ REC
GREEN ; ▬			BALANCE R				SIMULATED ST	DIGITAL S.WOOFER	A-B REPEAT	
YELLOW ; ◀			LEVEL -				EQ	KARAOKE	BALANCE L	
BLUE ; ▬			LEVEL +				3D AI EQ/M.EQ	KARAOKE EFFECT	BALANCE R	
☐			LEVEL				DISPLAY		DISPLAY	
☐							PLAY MODE		PLAY MODE	
VOL -	VOL -		VOLUME -				VOLUME -		VOLUME -	TUNE ▼
VOL +	VOL +		VOLUME +				VOLUME +		VOLUME +	TUNE ▲
CH V ; ◀◀			LEVEL -		◀◀◀		◀◀ SKIP		◀◀ SKIP	◀◀◀ (MD)
CH A ; ▶▶			LEVEL +		▶▶▶		▶▶ SKIP		▶▶ SKIP	▶▶▶ (MD)
± ; SAT	≥10/-				≥10		≥10/±		≥10/±	
CLEAR ; X							CLEAR ; CANCEL		CANCEL	
◀◀ ; ●	◀◀				◀◀◀		◀◀ SLOW/SEARCH		◀◀ SLOW/SEARCH	◀◀◀ (MD)
▶ ; i	▶				▶▶▶		▶		▶	▶ (MD)
▶▶ ; ?	▶▶				▶▶▶		▶▶ SLOW/SEARCH		▶▶ SLOW/SEARCH	▶▶▶ (MD)
■ ; X	■				■		■		■	■ (MD)
▬ ; ⬇					▬		◀ / ▬		◀ / ▬	▬ (MD)
1, 2, ... 9, 0	1, 2, ... 9, 0		DIGITAL 1, 2, 3				1, 2, ... 9, 0		1, 2, ... 9, 0	

Функции кнопок пульта IRC 22 F к AUX устройствам

Кнопки пульта IRC 22 F	Код 316		Код 317		Код 318		Код 319	
	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция	Функция	Доп. функция
▲ ; DVD			CD EASY PLAY		CD		CD	
AUDIO ; NICAM			TAPE EASY PLAY		AUDIO OFF		AUDIO OFF	
VIDEO ; SYS								
☐ ; ZOOM								
▼ ; TV			TUNER EASY PLAY		TUNER		TUNER	
☐ ; ↗			DECK 1/2 (TAPE)		DCC		DCC	
☐ ; LOCK								
▲ ; FAV	▲ EJECT							
○	○		OFF/ON		POWER		POWER	
AV					AUX		AUX	
✳ ; MUTE			MUTING -20dB		MUTING		MUTING	
MENU	PROGARM							
EXIT								
▲								
◀								
OK	ENTER							
▶								
▼								
✳ ; SETUP	TRACK MARK		EQ ON-FLAT		DISC			
♪ ; TITLE			EQ PRESET		PHONO		PHONO	
☐	EDIT							
GUIDE			PROGRAM (CD)					
☐	RANDOM		SLEEP					
☐	SCROLL		TIME-MODE (CD)					
RED ; ●	● REC		DECK2 AUTO REC	DECK2 ● REC	TAPE 1		TAPE 1	
GREEN ; ▬	SYNCHRO REC		TURNTABLE ■		TAPE 2		TAPE 2	
YELLOW ; ◀	A-B REPEAT		TURNTABLE ◀	◀ (TAPE)	◀ / ▶ (TAPE)			
BLUE ; ▬	REPEAT				DECK 1/2			
☐	DISPLAY							
☐	RECALL							
VOL -			VOLUME ▼		VOLUME -		VOLUME -	
VOL +			VOLUME ▲		VOLUME +		VOLUME +	
CH V ; ◀◀	◀◀ SKIP		◀◀ (CD)		◀◀ R.SKIP			
CH A ; ▶▶	▶▶ SKIP		▶▶ (CD)		▶▶ F.SKIP			
± ; SAT	≥10				≥10 (CD)			
CLEAR ; X	CLEAR							
◀◀ ; ●	◀◀ SEARCH		◀◀ (CD)	◀◀ (TAPE)	◀◀ REW	◀◀ (TAPE)		
▶ ; i	▶		▶ (CD)	▶ (TAPE)	▶ (CD)	▶ (TAPE)		
▶▶ ; ?	▶▶ SEARCH		▶▶ (CD)	▶▶ (TAPE)	▶▶ FF	▶▶ (TAPE)		
■ ; X	■		■ (CD)	■ (TAPE)	■ (CD)	■ (TAPE)		
▬ ; ⬇	▬		▬ (CD)	▬ (TAPE)	▬ (CD)	▬ (TAPE)		
1, 2, ... 9, 0	1, 2, ... 9, 0		1, 2, ... 9, 0		1, 2, ... 9, 0 (CD)		1, 2, ... 9, 0 (DCC)	



## Функции кнопок пульта IRC 22 F к TV устройствам

Кнопки пульта IRC 22 F	Коды 501-799	
	Функция	Доп. функция
▲ ; DVD		
AUDIO ; NICAM		
VIDEO ; SYS		
☐ ; ZOOM		
▼ ; TV		
⏪ ; ⏩		
☒ ; LOCK		
▲ ; FAV		
⏻	POWER ; ⏻	
AV	TV/VIDEO ; TV/AV	
⌘	MUTE ; ⌘	
MENU		
EXIT		
▲		
◀		
OK		
▶		
▼		
⌘ ; SETUP		
🎵 ; TITLE		
☐		
GUIDE		
⏻		
☐		
RED ; ●		
GREEN ; ▢		
YELLOW ; ◀		
BLUE ; ▶		
☐		
⏻		
VOL -	VOLUME ▼ ; 🔊-	
VOL +	VOLUME ▲ ; 🔊+	
CH V ; ⏪	CHANNEL ▼ ; P -	
CH ▲ ; ⏩	CHANNEL ▲ ; P +	
⊕ ; SAT		
CLEAR ; X		
⏪ ; ●		
▶ ; i		
▶ ; ?		
■ ; X		
⏻ ; ⏩		
1, 2, ... 9, 0	1, 2, ... 9, 0	

Для просмотра функций кнопок баз кодов 8 и 9 (SAT, STB, DVB устройства) перейдите по следующей ссылке <http://www.pult-irc.ru/files/manual/SatCodesForIrcF.pdf>